


Thru Axle Guide



Step 1: This guide must be printed at 100% scale.

Step 2: Identify your thru axle diameter using the examples on the right side.

Step 3: Measure the length of your axle with the ruler on the right. Start at the base of the axle spacer shown below.

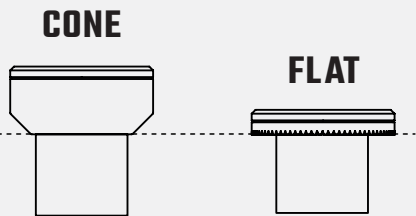


Step 4: Match axle thread pitch and width. Place your axle threads onto the examples below to choose your match. Thread pitch can be very similar so use caution when selecting the correct one.

Axle length is compatible +/- 2 mm

To find your thru axle or for more information visit:
WheelsMFG.com

Thread Pitch Gauge

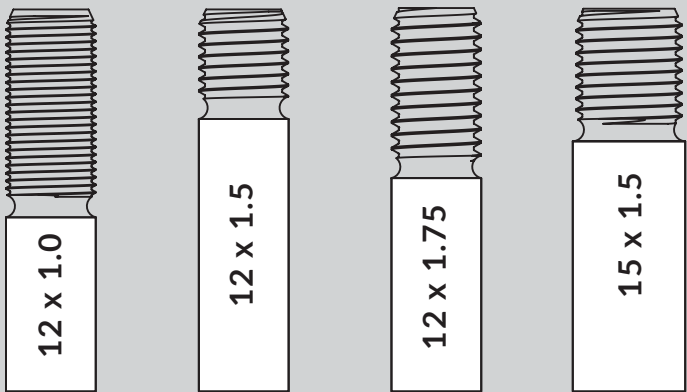

12MM

15MM

MM
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200
210
220
230