

# Seatpost Collar Instructions




**WHEELS MFG**

## Specifications

Precision-machined aluminum seatpost collar  
Includes stainless steel bolt and barrel nut for reliable clamping

Nominal Size (mm)	Clamping Range (mm)	Weight (g)
28.6	28.1 - 29.1	31
31.8	31.3 - 32.3	32
34.9	34.4 - 35.4	33

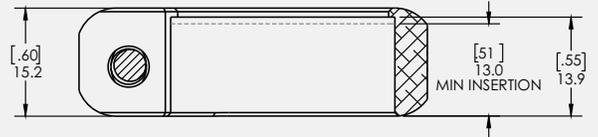

## Fit & Installation

To get the right fit, measure the outside diameter (OD) of your bike's seat tube not the seatpost itself. Seatpost collar sizes are based on the frame's seat tube diameter, and each size is designed to fit tubes within  $\pm 0.5$ mm of the listed size.

1. Slide the collar over the seat tube with the lip resting flush on top of the frame.
2. If your frame has a slot, line it up with the collar's slot.
3. Insert your seatpost and set it to the desired height.
4. Tighten the bolt to 5–7 Nm using a torque wrench for even clamping force.

Still not sure on sizing? Reach out, our team is happy to help.

To find your seatpost collar or for more information visit: [WheelsMFG.com](http://WheelsMFG.com)

## HOW TO MEASURE THE SEAT TUBE

### STEP 1

Print this guide at 100% scale. Cut out the measuring strip provided below.



### STEP 2

Measure the outside diameter (OD) of your bike's seat tube with the provided measuring strip, your tape measure or calipers.

