





INSTALLATION INSTRUCTIONS

REPLACEMENT PADS

- R1 V-Brake (H5, H12)
- R2 Avid Type 1
- R6 Tectonic (H4, H8)
- R16 V2-Brake (H5, H12)

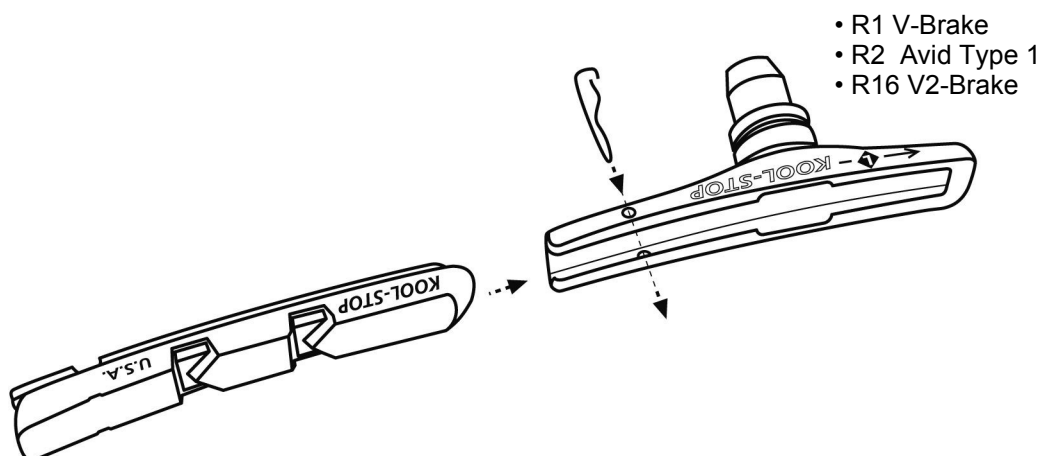

- R1 V-Brake
- R2 Avid Type 1
- R16 V2-Brake

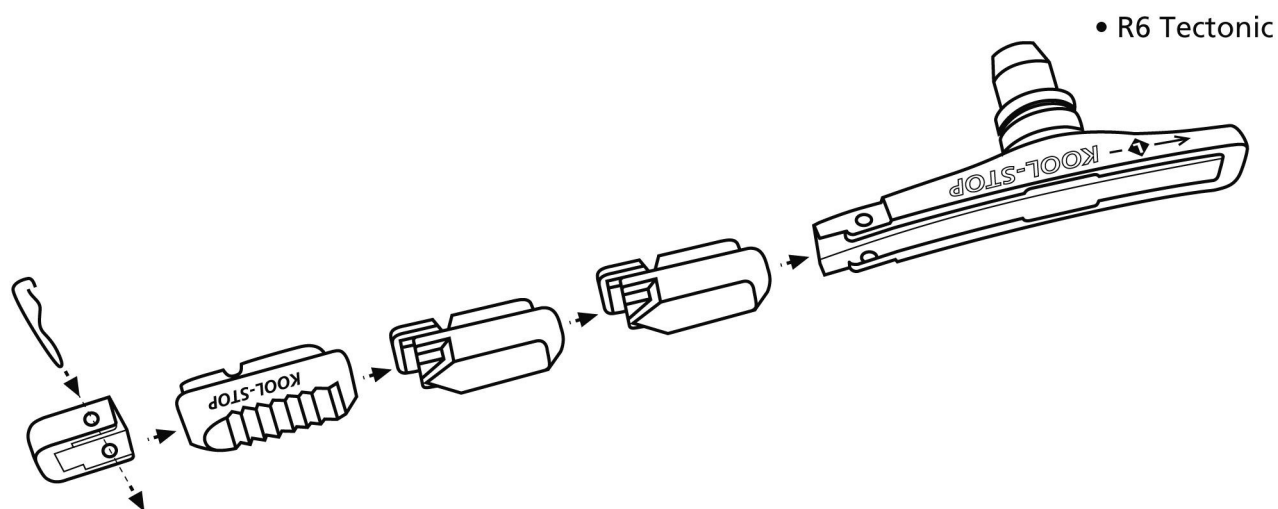

- R6 Tectonic



- Remove keeper pin from holder.
- Slide old pad out of holder.
- Insert replacement pad so that notch lines up with keeper pinholes in pad holder.
- Replace keeper pin.

IMPORTANT: Designed for bicycle use only. Do not ride bike until brakes are checked and functioning properly. All Kool-Stop Pads meet or exceed C.P.S.C. and D.I.N bicycle standards.